



REGISTERED OFFICE

406 Onyx, Akshar Cross Road, O. P. Road, Vadodara 390020. Gujarat. INDIA.

FOR FURTHER SUPPORT CALL US ON


+91 9408630765

+91 7930256667


+91 2652280178

WRITE TO US AT


support@jaaz.in

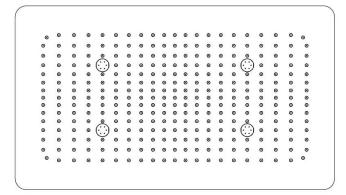


Rain shower MFS-4M

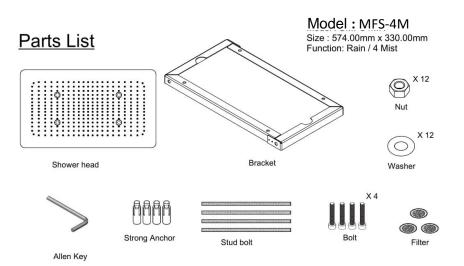

Dimensions

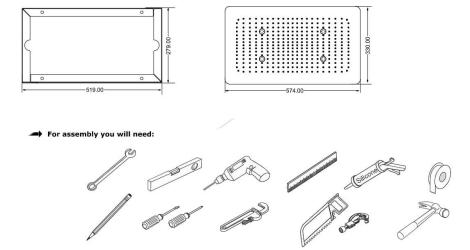


Installation Guide

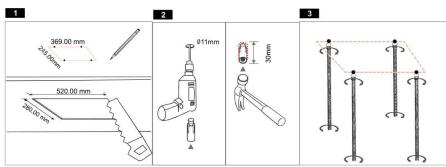

Cut the false ceiling to install the bracket and mark 4 position on the upper ceiling for strong anchor. Make the 4 holes (11dia, 30mm dip) on the 4 Screw 4 stud bol fasten each bolt. and hit them with a hammer.


Screw 4 stud bolts to the anchor bolts and

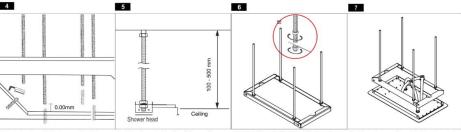

Check the length between the false ceiling and built-in bracket. Cut the stud bolt according to the measured value. Put one nut to each stud bolt.

Put the bracket to the false ceiling.

Put the shower head to the bracket. Tighten the stud bolts with 4 nuts Connect water supply hose to the and adust the height shower head.

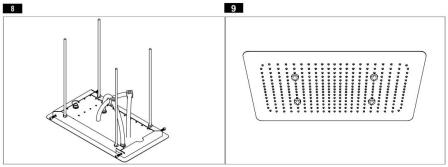

Fix 4xM8 Bolt

