We wish to thank you for purchasing and investing your trust in JAAZ Sandwich Rain Shower. We will do everything in our power to uphold this trust. Please read installation and care instruction carefully, because damage to surface & underlying material results from improper treatment is not covered by warranty.

Care instruction

Do not use any abrasive sponges or scouring agents for cleaning. We also advise you not to use cleaning agents containing solvent or acid, lime scale removers, household vinegar and cleaning agents containing agents with acetic acid in them. They are aggressive to the surface and will leave your Rain Shower dull & scratched. As the formulate of commercially available cleaning agents frequently change, we cannot guarantee they will provide the gentle care to our Rain Shower deserve. Clean the Rain Shower with a little soap and a moist cloth only. Then simply rinse off and wipe dry. You can avoid lime spots by drying the shower each time it is used . Water Supply: Minimum Pressure 3 bar, Maximum Pressure 4bar.

Water Hardness: If water hardness exceeds 180mg/L, we strongly recommend the use of water softening system. Warranty does not cover any damage caused due to water hardness.

Warranty - 3 years

Proven manufacturing & Material defects would be replaced free of cost during 3 year warranty period, provided above care instruction are followed properly.

Place & Date Dealer Stamp & Sign

FOR FURTHER SUPPORT CALL US ON

- +91 9408630765
- +91 7930256667
- +91 2652280178


WRITE TO US AT

support@jaaz.in

REGISTERED OFFICE

406 Onyx, Akshar Cross Road, O. P. Road, Vadodara 390020. Gujarat. INDIA.



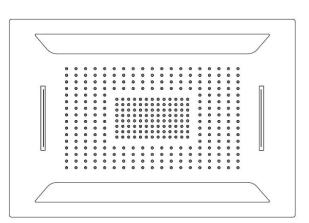

Multifunction Rain Shower


MF-WF

www.jaaz.in


Parts List

Model: MF-WF Size: 650.00mm x 450.00mm

Function: Rain / Intense / Dual Waterfall










Washer

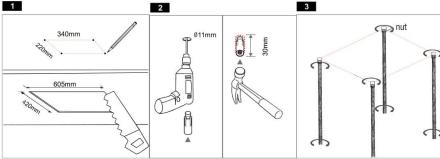


Cut the false to install the bracket and mark 4 position on the upper ceiling for strong anchor. Bracket Size: 605mm x 420mm

Position Size: 340mm x 220mm

Installation Guide

Make the 4 holes (11dia, 30mm dip) on the 4 marks. Put the 4 strong anchors into the holes fasten each bolt. and hit them with a hammer.

Screw 4 stud bolts to the anchor bolts and



Bracket

Stud bolt

Strong Anchor








Shower head







Allen Key


Dimensions



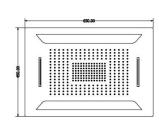


For assembly you will need:



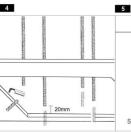

Put the bracket to the ceiling.

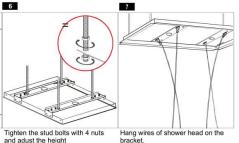

Check the length between the false ceiling and built-in bracket. Cut the stud bolt according to the measured value. Put one nut to each stud bolt. There must be 20mm gap between stud bolt and ceiling

9 10 8

intense 2 rain

waterfall

Put the shower head to the bracket.

1) Fix the shower head with 8 bolts with

2) Insert 2 LED covers.

Connect water supply hoses and power supply to the shower head.

